

**MAXIFY**

MAXIFY iB4020  
MAXIFY iB4120  
MAXIFY MB2020  
MAXIFY MB2120  
MAXIFY MB2320  
MAXIFY MB2720  
MAXIFY MB5020  
MAXIFY MB5120  
MAXIFY MB5320  
MAXIFY MB5420

**PIXMA iP**

PIXMA iP110  
PIXMA iP7220  
PIXMA iP8720

**PIXMA MP**

PIXMA MP495 / MP499  
PIXMA MP560  
PIXMA MP640 / MP640R  
PIXMA MP990

**PIXMA TS**

TS302  
TS702  
TS3100 Series  
TS3300 Series  
TS5020  
TS5120  
TS5320  
TS6020  
TS6120  
TS6220  
TS6320  
TS6420  
TS8020  
TS8120  
TS8220  
TS8320  
TS9020

TS9120  
TS9520 / TS9521C

**PIXMA MG**

PIXMA MG2900 Series  
PIXMA MG3000 Series  
PIXMA MG3100 Series  
PIXMA MG3200 Series  
PIXMA MG3500 Series  
PIXMA MG3620  
PIXMA MG4120  
PIXMA MG4220  
PIXMA MG5220  
PIXMA MG5320  
PIXMA MG5400 Series  
PIXMA MG5500 Series  
PIXMA MG5620  
PIXMA MG5700 Series  
PIXMA MG6120  
PIXMA MG6220  
PIXMA MG6320  
PIXMA MG6420  
PIXMA MG6620  
PIXMA MG6800 Series  
PIXMA MG7120  
PIXMA MG7520  
PIXMA MG7720  
PIXMA MG8120  
PIXMA MG8220

**PIXMA G**

G3200  
G3260  
G4200  
G4210  
G5020  
G6020  
G7020

**PIXMA MX**

PIXMA MX340  
PIXMA MX350

PIXMA MX410  
PIXMA MX420  
PIXMA MX430 Series  
PIXMA MX450 Series  
PIXMA MX470 Series  
PIXMA MX490 Series  
PIXMA MX512  
PIXMA MX522  
PIXMA MX532  
PIXMA MX712  
PIXMA MX722  
PIXMA MX870  
PIXMA MX882  
PIXMA MX892  
PIXMA MX922

**PIXMA TR**

TR150  
TR4500 Series  
TR7020  
TR7520  
TR8520  
TR8620

**SELPHY CP**

SELPHY CP900  
SELPHY CP910 / CP910 Blue  
SELPHY CP1200  
SELPHY CP1300

**PRO Series**

PIXMA PRO-10  
PIXMA PRO-100  
PIXMA PRO-200  
imagePROGRAF PRO-300  
imagePROGRAF PRO-1000

**PIXMA iX**

PIXMA iX6820