

| | | |
|----------------------|------------------|---------------------------------|
| MAXIFY | TS6420 | G7020 |
| | TS8020 | |
| GX3020 | TS8120 | PIXMA MX |
| GX4020 | TS8200 Series | |
| GX5020 | TS8300 Series | MX340 |
| GX6020 | TS9020 | MX350 |
| GX7020 | TS9120 | MX410 |
| iB4020 | TS9520 / TS9521C | MX420 |
| iB4120 | | MX430 Series |
| MB2020 | PIXMA MG | MX450 Series |
| MB2120 | | MX470 Series |
| MB2320 | MG2900 Series | MX490 Series |
| MB2720 | MG3000 Series | MX512 |
| MB5020 | MG3100 Series | MX522 |
| MB5120 | MG3200 Series | MX532 |
| MB5320 | MG3500 Series | MX712 |
| MB5420 | MG3620 | MX722 |
| | MG4120 | MX870 |
| PIXMA iP / iX | MG4220 | MX882 |
| | MG5220 | MX892 |
| iP110 | MG5320 | MX922 |
| iP7220 | MG5400 Series | |
| iP8720 | MG5500 Series | PIXMA TR |
| iX6820 | MG5620 | |
| | MG5700 Series | TR150 |
| PIXMA MP | MG6120 | TR4500 Series |
| MP495 / MP499 | MG6220 | TR4700 Series |
| MP560 | MG6320 | TR7000 Series |
| MP640 / MP640R | MG6420 | TR7520 |
| MP990 | MG6620 | TR8520 |
| | MG6800 Series | TR8600 Series |
| PIXMA TS | MG7120 | |
| | MG7520 | SELPHY CP |
| TS302 | MG7720 | |
| TS700 Series | MG8120 | CP900 |
| TS3100 Series | MG8220 | CP910 / CP910 Blue |
| TS3300 Series | | CP1200 |
| TS3500 Series | PIXMA G | CP1300 |
| TS5020 | G620 | PIXMA / imagePROGRAF PRO |
| TS5120 | G3200 | |
| TS5320 | G3260 | PIXMA PRO-10 |
| TS6020 | G4200 | PIXMA PRO-100 |
| TS6120 | G4210 | PIXMA PRO-200 |
| TS6220 | G5020 | imagePROGRAF PRO-300 |
| TS6320 | G6020 | imagePROGRAF PRO-1000 |