





 
 

 






Press	Maintenance Code	Operation
1		Prints the nozzle check pattern.
2		Cleans the print head.
3		Cleans the print head deeply.
4		Prints the print head alignment sheet.
5		Scans the print head alignment sheet to align the print head automatically.
6		Prints the current head position adjustment values.
7		Cleans the paper feed roller.
8		Cleans the inside of the machine.
9		Switches the machine to quiet mode to minimize operating noise.
10		Switches the size of paper loaded in the front tray between A4 and Letter. (This setting is used for making copies.)
11		Sets the machine to prevent paper abrasion.
12		Sets the machine not to feed two or more sheets of plain paper at a time.
13		Enables or disables the auto power off feature.
14		Enables or disables the auto power on feature.
15		Prints the wireless LAN setup information.
16		Enables or disables the wireless LAN connection. Press the Color button to enable the wireless LAN connection and the Black button to disable it.
17		Resets wireless LAN settings to the defaults.