

Canon

CP1013D II /

CP1213D II

INSTRUCTIONS
MODE D'EMPLOI
INSTRUCCIONES

ENGLISH

FRANÇAIS

ESPAÑOL

CONTENTS


GENERAL MAINTENANCE	P.1
BEFORE USING THE PRINTER FOR FIRST TIME	P.1
BEFORE STARTING	P.1
DECIMAL POINT SELECTOR SWITCH	P.2
ROUNDING SWITCH	P.2
CONSTANT SWITCH	P.2
ACCUMULATION SWITCH	P.2
ITEM COUNT / AVERAGE CALCULATION SWITCH	P.2
PRINT / PAIR MODE CALCULATION SWITCH	P.3
STORE / RECALL MEMORY KEY	P.3
RECALL ITEM COUNT / ITEM PLUS KEY	P.4
OVERFLOW FUNCTION	P.4
SPECIFICATIONS	P.4
CARRYING HANDLE	P.4
REPLACING THE INK RIBBON	P.5
INSTALLING PRINTING PAPER	P.5
CALCULATION EXAMPLE	P.16-24

GENERAL MAINTENANCE

- Do not use or leave the calculator under direct sunlight. Areas subject to rapid temperature changes, high humidity, dust and dirt should also be avoided.
- Use a dry cloth to clean the casing of the unit. Do not use water or detergents.
- Only use the printer when the paper roll is loaded.
- Avoid using the calculator in places where there are iron filings, as this may affect the electrical circuits of the calculator.
- Do not place anything on top of the machine, particularly on top of the printer mechanism.
- Turn the calculator off before removing the plug from the electrical outlet.
- In case of electrical fault (i.e. smoke), disconnect the plug from the electrical point immediately. The socket outlet should be near to the equipment and easily accessible.

BEFORE USING THE PRINTER FOR FIRST TIME

Remove the tape on the ink ribbon of the calculator before use.

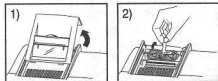

BEFORE STARTING

- 1) Plug in AC power cord. (Figure (a))
- 2) Turn power switch on. (Power switch is located on the right side of the cabinet.) "C" will automatically be printed on the paper if the switch is set to print. (Figure (b))

