

Menu Route Map

Network Settings

- Select Wired/Wireless LAN*
 - Wired LAN, Wireless LAN
- Wireless LAN Settings*
 - SSID Settings
 - Select Access Point
 - Enter Manually
 - Security Settings
 - None
 - WEP (802.11 Authentication)
 - Open System, Shared key
 - WPA/WPA2-PSK (WPA/WPA2 Encryption)
 - Auto, AES-CCMP
 - WPS Push Button Mode
 - WPS PIN Code Mode
 - Power Save Mode
 - Off, On
 - Wireless LAN Information
 - MAC Address
 - Wireless LAN Status
 - Latest Error Information
 - Channel
 - SSID Settings
 - Security Settings
 - Power Save Mode
- Direct Connection Settings*
 - Use Direct Connection
 - Off, On
 - Direct Connection Only
 - Wireless LAN/Direct Conn. (Auto Switch)
 - Time Until Direct Connection Termination
 - 0 (Off), 1 to 10 to 60 (min.)
 - Access Point Mode Settings
 - Use Custom SSID
 - Off, On
 - Use Custom Network Key
 - Off, On
- TCP/IP Settings
 - IPv4 Settings
 - IP Address Settings
 - Auto Acquire
 - Select Protocol
 - Off, DHCP, BOOTP, RARP
 - Auto IP
 - Off, On
 - Manually Acquire
 - IP Address: 0.0.0.0
 - Subnet Mask: 0.0.0.0
 - Gateway Address: 0.0.0.0
 - Check Settings
 - Auto Acquire
 - IP Address
 - Subnet Mask
 - Gateway Address
 - PING Command
 - DNS Settings
 - DNS Server Settings
 - Primary DNS Server: 0.0.0.0
 - Secondary DNS Server: 0.0.0.0
 - DNS Host Name/Domain Name Settings
 - Host Name
 - Domain Name
 - DNS Dynamic Update Settings
 - Off, On (DNS Dyn. Updt. Intrvl.)
 - 0 to 24 to 48 (hr.)
 - mDNS Settings
 - Off, On (mDNS Name)
 - DHCP Option Settings
 - Acquire Host Name
 - Off, On
 - DNS Dynamic Update
 - Off, On
 - Acquire SMTP Server Address*
 - Off, On
 - Acquire POP Server Address*
 - Off, On
 - IPv6 Settings
 - Use IPv6
 - Off, On, Check Settings
 - Link-Local Address
 - Prefix Length
 - Stateless Address Settings
 - Off, On, Check Settings
 - Stateless Address
 - Prefix Length
 - Use DHCPv6
 - Off, On, Check Settings
 - Stateful Address
 - Prefix Length
 - DNS Settings
 - DNS Host Name/Domain Name Settings (Use IPv4 Host/Domain)
 - Off, On
 - Host Name
 - Domain Name
 - DNS Dynamic Update Settings
 - Off, On
 - mDNS Settings
 - Off, On (Use IPv4 Name for mDNS)
 - Off (mDNS Name), On
 - LPD Print Settings
 - Off, On
 - RAW Print Settings
 - Off, On
 - WSD Settings
 - WSD Print Settings
 - Use WSD Print
 - Off, On
 - Use WSD Browsing
 - Off, On
 - WSD Scan Settings
 - Use WSD Scan
 - Off, On
 - Use Computer Scan
 - Off, On
 - Use Multicast Discovery
 - Off, On
 - Use HTTP
 - Off, On
 - Port Number Settings
 - LPD
 - 1 to 515 to 65535
 - RAW
 - 1 to 9100 to 65535
 - WSD Multicast Discovery
 - 1 to 3702 to 65535
 - HTTP
 - 1 to 80 to 65535
 - POP3*
 - 1 to 110 to 65535
 - SMTP*
 - 1 to 25 to 65535
 - SNMP
 - 1 to 161 to 65535
 - MTU Size
 - 1300, 1400, 1500

SNMP Settings

- SNMPv1 Settings
 - Off, On
 - Community Name 1 Settings
 - Community Name
 - MIB Access Permission
 - Community Name 2 Settings
 - Community Name
 - MIB Access Permission
 - Dedicated Community Settings
 - Off, On
- SNMPv3 Settings
 - Off, On
- Acquire Printer Mngt. Info. from Host
 - Off, On
- Dedicated Port Settings
 - Off, On
- Waiting Time for Connection at Startup
 - 0 to 300 (sec.)
- Ethernet Driver Settings
 - Auto Detect
 - Off, On
 - Communication Mode
 - Half Duplex, Full Duplex
 - Ethernet Type
 - 10BASE-T, 100BASE-TX
- Mac Address
- IEEE 802.1X Settings
 - Off, On
- Initialize Network Settings

Settings marked with an asterisk (*) are only available for the MF249dw / MF247dw.

Preferences

- Volume Settings
 - Fax Tone
 - 0 to 1 to 5
 - Ring Tone
 - 0 to 1 to 5
 - TX Done Tone
 - 0 to 1 to 5
 - Only When Error Occurs
 - Off, On
 - RX Done Tone
 - 0 to 1 to 5
 - Only When Error Occurs
 - Off, On
 - Scanning Done Tone
 - 0 to 1 to 5
 - Only When Error Occurs
 - Off, On
 - Entry Tone
 - Off, On
 - Invalid Entry Tone
 - Off, On
 - Warning Tone
 - Off, On
 - Job Done Tone
 - Off, On
 - Energy Saver Alert
 - Off, On
 - Original In Feeder Detection Tone
 - Off, On
- Display Settings
 - Default Screen after Startup/Restoration
 - Home, Copy, Fax, Scan
 - Home Screen Button Display Settings
 - Contrast
 - 5 Levels
 - Invert Screen Colors
 - Off, On
 - Millimeter/Inch Entry Switch
 - Millimeter, Inch
 - Notify to Check Paper Settings
 - Off, On
 - Gram/Pound Switch
 - Gram, Pound
 - Notify to Clean Original Scanning Area
 - Off, On
 - Message Display Time
 - 1 to 2 to 5 (sec.)
 - Scrolling Speed
 - Slow, Standard, Fast
 - Cursor Movement Type
 - Auto, Manual
 - Language
 - Chinese (Simplified), Chinese (Traditional), English, French, German, Italian, Japanese, Korean, Portuguese, Spanish
 - Remote UI Language
 - Chinese (Simplified), Chinese (Traditional), English, French, German, Italian, Japanese, Korean, Portuguese, Spanish

Timer Settings

- Quiet Mode Time
 - Start Time
 - Off, On
 - End Time
 - Start time setting to enter quiet mode
 - Off, On
 - Stop Time
 - Stop time setting to exit quiet mode
 - Off, On
- Date/Time Settings
 - Date Format
 - YYYY MM/DD, MM/DD/YYYY, DD/MM YYYY
 - Time Format
 - 12 Hour (AM/PM), 24 Hour
 - Current Date/Time Settings
 - Time Zone
 - (UTC-12:00) International Date Line West to (UTC-05:00) Eastern Time (US & Canada) to (UTC+14:00) Kiribati Island
 - Daylight Saving Time Settings
 - Off, On
 - Start: Month, Day
 - End: Month, Day
- Auto Sleep Time
 - 1 to 30 (min.)
- Auto Reset Time
 - 0=Off (Auto Reset is disabled.), 1 to 2 to 9 (min.)
- Function After Auto Reset
 - Default Function, Selected Function
- Auto Offline Time
 - 0=Off (The machine remains online.), 1 to 5 to 60 (min.)

Common Settings*

- Switch Paper Feed Method
 - Multi-Purpose Tray
 - Speed Priority, Print Side Priority
 - Drawer 1
 - Speed Priority, Print Side Priority

The settings marked with "*" are only for MF249dw / MF247dw.

Copy Settings

- Change Default Settings
 - Number of Copies
 - 1 to 999
 - Density
 - 4 to 0 to +4, Auto Density
 - Original Type
 - Text, Text/Photo (High Speed), Text/Photo, Photo
 - 2-Sided*1
 - Off, 1->2-Sided, 2->2-Sided*2, 2->1-Sided*2, Original/Finishing Type
 - Copy Ratio
 - Custom Ratio, 100% (Direct), 400% (Max), 200%, 129% STMT-LTR, 78% LGL-LTR, 64% LTR-STMT, 50%, 25%(Min)
 - N on 1
 - Off, 2 on 1, 4 on 1, ID Card Copy, Select Layout
 - Collate
 - Off, On
 - Sharpness
 - 7 Levels
- Correct Density
 - 4 to 0 to +4
- Initialize Default Settings

The settings marked with *1 are only for MF249dw / MF247dw. The settings marked with *2 are only for MF249dw.

Fax Settings

- Basic Settings
 - Register Unit Telephone Number
 - Select Line Type
 - Pulse, Tone
 - Public Line Connection
 - Direct, Adapter 1, Adapter 2
 - Off-Hook Alarm
 - 0 to 5
 - Communication Management Settings
 - TX Start Speed
 - 33600 bps, 14400 bps, 9600 bps, 7200 bps, 4800 bps, 2400 bps
 - RX Start Speed
 - 33600 bps, 14400 bps, 9600 bps, 7200 bps, 4800 bps, 2400 bps
- TX Function Settings
 - Change Default Settings
 - Resolution
 - 200 x 100 dpi (Normal), 200 x 200 dpi (Fine), 200 x 200 dpi (Photo), 200 x 400 dpi (Superfine)
 - Density
 - 9 Levels
 - 2-Sided Original*1
 - Off, Book Type, Calendar Type
 - Sharpness
 - 7 Levels
 - Register Unit Name
 - ECM TX
 - Off, On
 - Set Pause Time
 - 1 to 2 to 15 (sec.)
 - Auto Redial
 - Off, On
 - Number of Times to Redial
 - 1 to 2 to 10 (times)
 - Redial Interval
 - 2 to 99 (min.)
 - Redial When Error Occurs
 - Off, On
 - TX Terminal ID
 - Off, On
 - Print Position
 - Inside Image Area, Outside Image Area
 - Mark Number as
 - FAX, TEL
 - Check Dial Tone Before Sending
 - Off, On
 - Allow Fax Driver TX
 - Off, On
 - Confirm Entered Fax Number
 - Off, On
 - Restrict Sequential Broadcast
 - Off, Confirm Sequential Broadcast, Reject Sequential Broadcast
- Initialize Default Settings
- RX Function Settings
 - ECM RX
 - Off, On
 - Incoming Ring
 - Off, On (No. of Rings)
 - 1 to 2 to 99 (times)
 - Remote RX
 - Off, On (Remote RX ID)
 - 00 to 25 to 99
 - Switch to Auto RX
 - Off, On (Ring Time Till Auto RX)
 - 1 to 15 to 99 (sec.)
 - Memory Lock Settings
 - Off, On
 - Report Print
 - Off, On
 - Memory Lock Time
 - Off, On
 - Memory Lock Start Time
 - Memory Lock End Time
 - RX Print Settings
 - Print on Both Sides*2
 - Off, On
 - Reduce RX Size
 - Off, On
 - Ratio
 - Auto, 97%, 95%, 90%, 75%
 - Direction
 - Vertical/Horizontal, Vertical Only
 - RX Page Footer
 - Off, On
 - Continue Print. When Near Cart. Life End
 - Off, On
 - Forwarding Settings*2
 - Enable Forwarding Settings
 - Off, On
 - Print Images
 - Off, On, Only When Error Occurs
 - Store Images in Memory
 - Off, Only When Error Occurs
 - Fax Setup Guide

Settings marked with *1 are only available for the MF249dw. Settings marked with *2 are only available for the MF249dw / MF247dw.

Scan Settings

- E-Mail Settings*1
 - Change Default Settings
 - Scan Size
 - LTR, LGL, STMT
 - Color Mode
 - Color, Black & White
 - File Format
 - PDF, PDF (Compact), JPEG, TIFF
 - Density
 - 9 Levels
 - Original Orientation
 - Portrait, Landscape
 - Original Type
 - Text, Text/Photo, Photo
 - 2-Sided Original*2
 - Off, Book Type, Calendar Type
 - Sharpness
 - 7 Levels
 - Data Size
 - Small: Memory Priority, Standard, Large: Image Quality Priority
 - Subject/Message
 - Subject
 - Message
 - Reply To
 - None, Specify from Address Book
 - Priority
 - Low, Standard, High
 - Initialize Default Settings
- File Settings*1
 - Change Default Settings
 - Scan Size
 - LTR, LGL, STMT
 - Color Mode
 - Color, Black & White
 - File Format
 - PDF, PDF (Compact), JPEG, TIFF
 - Density
 - 9 Levels
 - Original Orientation
 - Portrait, Landscape
 - Original Type
 - Text, Text/Photo, Photo
 - 2-Sided Original*2
 - Off, Book Type, Calendar Type
 - Sharpness
 - 7 Levels
 - Data Size
 - Small: Memory Priority, Standard, Large: Image Quality Priority
 - Initialize Default Settings
- Register Unit Name (E-Mail)*1
- Output File Image Settings*2
 - YCBCR TX Gamma Value
 - Gamma 1.0, Gamma 1.4, Gamma 1.8, Gamma 2.2
- Shortcut Key Settings
 - Register
 - Scan -> PC1
 - Off
 - USB Connection
 - Color Scan, B&W Scan, Custom 1, Custom 2
 - Network Connection
 - Color Scan, B&W Scan, Custom 1, Custom 2
 - Scan -> PC2
 - Off
 - USB Connection
 - Color Scan, B&W Scan, Custom 1, Custom 2
 - Network Connection
 - Color Scan, B&W Scan, Custom 1, Custom 2
 - Confirm Destination
 - Scan -> PC1
 - Scan -> PC2



Settings marked with "*" are only available for the MF249dw / MF247dw.

Printer Settings

- Action When Paper Size Mismatch
 - Force Output, Display Error
- Mobile Print Halftones
 - Gradation, Error Diffusion
- Copies*
 - 1 to 999
- 2-Sided Printing*
 - Off, On
- Default Paper*
- Print Quality
 - Density*
 - 17 Levels
 - Fine Adjust
 - High: 17 Levels
 - Medium: 17 Levels
 - Low: 17 Levels
 - Toner Save
 - Off, On
 - Special Print Mode*
 - Off, Special Settings 1, Special Settings 2
 - Resolution*
 - 1200 dpi, 600 dpi
 - Density Fine Adjustment*
 - 1 to 0 to +1
- Layout
 - Binding Location
 - Long Edge, Short Edge
- Timeout*
 - 5 to 15 to 300 (sec.)
- PCL*
 - Paper Save
 - Off, On
 - Unit of Measure
 - Millimeters, Inches
 - X dimension
 - 3 to 8 1/2 (inches) or 77 to 216 (mm)
 - Y dimension
 - 5 to 14 (inches) or 127 to 356 (mm)
 - Append CR to LF
 - Yes, No
 - Enlarge A4 Print Width
 - Off, On
 - Halftones
 - Text
 - Color Tone, Gradation, Resolution
 - Graphics
 - Color Tone, Gradation, Resolution
 - Images
 - Color Tone, Gradation, Resolution

Settings marked with "*" are only available for the MF249dw / MF247dw.

Menu Route Map

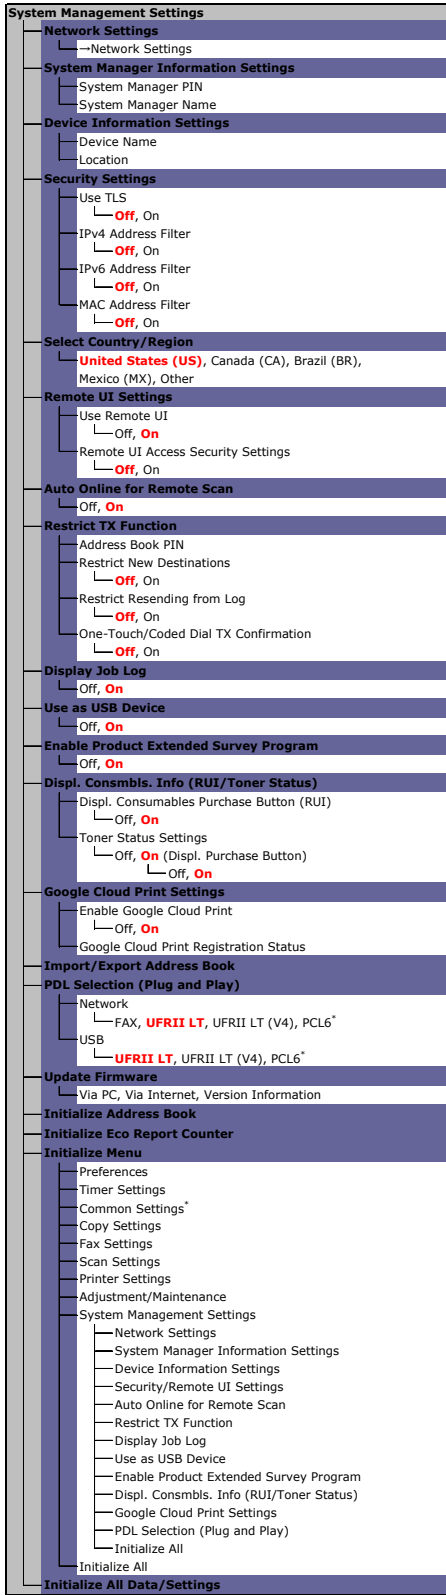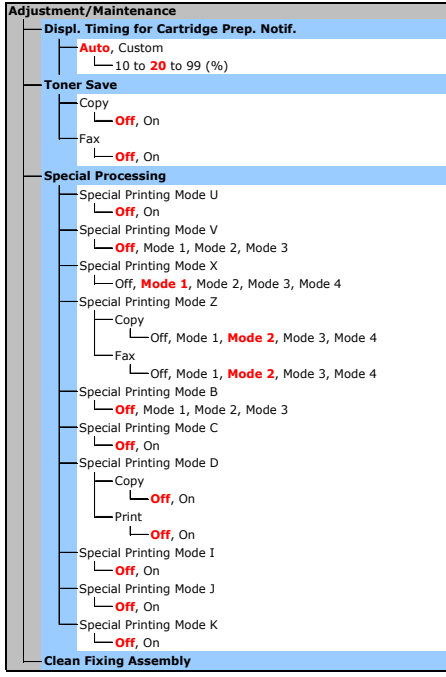

Settings marked with "*" are only available for the MF249dw / MF247dw.