

Menu Route Map

Preferences

- Display Settings
 - Default Screen After Startup/Restoration
 - Home, Secure Print, Status Monitor
 - Home Screen Button Display Settings
 - Set Display Order
 - Language
 - English, 日本語, Français, Español, Deutsch, Italiano, Português, 中文(简体), 中文(繁體), 한국어
 - Remote UI Language
 - English, Japanese, French, Spanish, German, Italian, Portuguese, Chinese (Simplified), Chinese (Traditional), Korean
 - Millimeter/Inch Entry Switch
 - Millimeter, **Inch**
 - Gram/Pound Switch
 - Gram, **Pound**
 - Display Timing for Cart. Prep.
 - Auto
 - Off
 - Custom

English Keyboard Layout

- USA Layout
- UK Layout

Timer/Energy Settings

- Current Date/Time Settings
 - Date/Time Settings
 - Time Zone
 - (UTC-12:00) International Date Line West to (UTC-05:00) Eastern Time (US & Canada) to (UTC+14:00) Kiribati Island
 - Daylight Saving Time Settings
 - Off
 - On
 - Start: Month, Week, Day
 - End: Month, Week, Day
 - Date Format
 - YYYY MM/DD, MM/DD/YYYY, DD/MM YYYY
 - Time Format
 - 12 Hour (AM/PM), 24 Hour
 - Auto Reset Time
 - Set This Function
 - Off
 - On
 - Set Time
 - 1 to 2 to 9 (min.)
 - Function After Auto Reset
 - Default Function, Selected Function
 - Auto Sleep Time
 - 5 to 240 (min.)
 - Auto Sleep Daily Timer
 - Set This Function
 - Off
 - On
 - (0:00 to 23:59)
 - Time Settings for Auto Adjust Gradation
 - Set This Function
 - Off
 - On
 - (0:00 to 23:59)
 - Sleep Mode Exit Time Settings
 - Set This Function
 - Off
 - On
 - (0:00 to 23:59)

Network

- Select LAN
 - Wired LAN, Wireless LAN
- Wireless LAN Settings
 - SSID Settings
 - Select Access Point
 - Enter Manually
 - Security Settings
 - None
 - WEP
 - Open System
 - WEP Key 1 to 4
 - Shared Key
 - WEP Key 1 to 4
 - WPA/WPA2-PSK
 - Auto, AES - CCMP
 - WPS Push Button Mode
 - WPS PIN Code Mode
 - Power Save Mode
 - Off, On
 - Connection Information
 - MAC Address
 - Wireless LAN Status
 - Latest Error Information
 - Channel
 - SSID Settings
 - Security Settings
 - Power Save Mode
- Direct Connection Settings
 - Use Direct Connection
 - Off
 - On
 - Direct Connection Termination
 - Automatically Terminate Session
 - Off
 - On
 - Time Until Session Terminates
 - 1 to 60 (min.)
 - Access Point Mode Settings
 - Use Custom SSID
 - Off
 - On
 - SSID
 - Use Custom Network Key
 - Off
 - On
 - Network Key
- TCP/IP Settings
 - IPv4 Settings
 - IP Address Settings
 - Auto Acquire
 - Auto Acquire
 - Off
 - On
 - Select Protocol
 - Off, DHCP
 - Auto IP
 - Off, On
 - Manually Acquire
 - IP Address: 0.0.0.0
 - Subnet Mask: 0.0.0.0
 - Gateway Address: 0.0.0.0
 - Check Settings
 - DHCP Option Settings
 - Acquire Host Name
 - Off, On
 - DNS Dynamic Update
 - Off, On
 - Acquire DNS Server Address
 - Off, On
 - Acquire Domain Name
 - Off, On

- Acquire WINS Server Address
 - Off, On
- Acquire POP Server Address
 - Off, On
- PING Command
 - Off, On
- IPv6 Settings
 - Use IPv6
 - Off
 - On
 - Stateless Address Settings
 - Stateless Address Settings
 - Off, On
 - Check Settings
 - Stateless Address
 - Off, On
 - Prefix Length
 - DHCPv6 Settings
 - Use DHCPv6
 - Off, On
 - Check Settings
 - Stateless Address
 - Off, On
 - Prefix Length
 - DHCP Option Settings
 - Acquire DNS Server Address
 - Off, On
 - Acquire Domain Name
 - Off, On
- DNS Settings
 - IPv4 DNS Server Address Settings
 - Primary DNS Server: 0.0.0.0
 - Secondary DNS Server: 0.0.0.0
 - DNS Host/Domain Name Settings
 - IPv4
 - Host Name
 - Domain Name
 - IPv6
 - Use IPv4 Host/Domain
 - Off
 - On
 - Host Name
 - Domain Name
 - DNS Dynamic Update Settings
 - IPv4
 - DNS Dynamic Update
 - Off
 - On
 - DNS Dynamic Update Interval
 - 0 to 24 to 48 (hr.)
 - IPv6
 - DNS Dynamic Update
 - Off
 - On
 - DNS Dynamic Update Interval
 - 0 to 24 to 48 (hr.)
 - mDNS Settings
 - IPv4
 - Use mDNS
 - Off
 - On
 - mDNS Name
 - IPv6
 - Use mDNS
 - Off
 - On
 - Use Same mDNS Name as IPv4
 - Off
 - On
 - mDNS Name
- WINS Settings
 - WINS Resolution
 - Off
 - On
 - WINS Server Address: 0.0.0.0
- LPD Settings
 - Use LPD Printing
 - Off, On
 - RX Timeout
 - 1 to 5 to 60 (min.)
- RAW Settings
 - Use RAW Printing
 - Off, On
 - RX Timeout
 - 1 to 5 to 60 (min.)
- WSD Settings
 - Use WSD Printing
 - Off, On
 - Use WSD Browsing
 - Off, On
 - Use Multicast Discovery
 - Off, On
- Use HTTP
 - Off, On
- Use IPSec
 - Off, On
- Port Number Settings
 - LPD
 - 1 to 615 to 65535
 - RAW
 - 1 to 9100 to 65535
 - WSD Multicast Discovery
 - 1 to 3702 to 65535
 - HTTP
 - 1 to 80 to 65535
 - Multicast Discovery
 - 1 to 427 to 65535
 - POP3
 - 1 to 110 to 65535
 - SNMP
 - 1 to 161 to 65535
- MTU Size
 - 1300, 1400, 1500
- SNMP Settings
 - SNMPv1 Settings
 - Off, On
 - SNMPv3 Settings
 - Off, On
 - Acquire Printer Mngt. Info. from Host
 - Off, On
 - Format Host Rsrcs. MIB to RFC2790
 - Off, On
- Use Dedicated Port
 - Off, On
- Dedicated Port Authentication Method
 - Mode 1, Mode 2
- Waiting Time for Connection at Startup
 - 0 to 300 (sec.)
- Ethernet Driver Settings
 - Auto Detect
 - Off
 - Communication Mode
 - Half Duplex, Full Duplex
 - Ethernet Type
 - 10BASE-T, 100BASE-TX, 1000BASE-T
 - MAC Address
 - Off, On
- Use IEEE 802.1X
 - Off, On

Firewall Settings

- IPv4 Address Filter
 - Outbound Filter
 - Off, On
 - Inbound Filter
 - Off, On
- IPv6 Address Filter
 - Outbound Filter
 - Off, On
 - Inbound Filter
 - Off, On
- MAC Address Filter
 - Outbound Filter
 - Off, On
 - Inbound Filter
 - Off, On

Google Cloud Print Settings

- Use Google Cloud Print
 - Off, On
- Google Cloud Print Regist. Status
 - Off, On

Device Settings Management

- Off, On

RMT-SW

- Off, On

Initialize Network Settings

Settings marked with *** may not be displayed depending on the options or other setting items.

External Interface

USB Settings

- Use as USB Device
 - Off, On
- Use USB Storage Device
 - Off, On

Adjustment/Maintenance

Adjust Image Quality

- Auto Adjust Gradation
 - Quick Adjust
- Auto Correction Settings
 - Auto Adjust Image Regularly
 - Off, When Turning Main Power ON
 - Correct Print Color Mismatch
 - After Printing First Job, When Turning Main Power ON
- Correct Print Color Mismatch
- Adjust Print Position
 - Multi-Purpose Tray
 - Adjust Vertically (Front Side)
 - 0.20" to 0.00" to +0.20" (-5.0 to 0.0 to +5.0 (mm))
 - Adjust Horizontally (Front Side)
 - 0.20" to 0.00" to +0.20" (-5.0 to 0.0 to +5.0 (mm))
 - Adjust Vertically (Back Side)
 - 0.20" to 0.00" to +0.20" (-5.0 to 0.0 to +5.0 (mm))
 - Adjust Horizontally (Back Side)
 - 0.20" to 0.00" to +0.20" (-5.0 to 0.0 to +5.0 (mm))
 - Drawer 1
 - Adjust Vertically (Front Side)
 - 0.20" to 0.00" to +0.20" (-5.0 to 0.0 to +5.0 (mm))
 - Adjust Horizontally (Front Side)
 - 0.20" to 0.00" to +0.20" (-5.0 to 0.0 to +5.0 (mm))
 - Adjust Vertically (Back Side)
 - 0.20" to 0.00" to +0.20" (-5.0 to 0.0 to +5.0 (mm))
 - Adjust Horizontally (Back Side)
 - 0.20" to 0.00" to +0.20" (-5.0 to 0.0 to +5.0 (mm))
 - Drawer 2
 - Adjust Vertically (Front Side)
 - 0.20" to 0.00" to +0.20" (-5.0 to 0.0 to +5.0 (mm))
 - Adjust Horizontally (Front Side)
 - 0.20" to 0.00" to +0.20" (-5.0 to 0.0 to +5.0 (mm))
 - Adjust Vertically (Back Side)
 - 0.20" to 0.00" to +0.20" (-5.0 to 0.0 to +5.0 (mm))
 - Adjust Horizontally (Back Side)
 - 0.20" to 0.00" to +0.20" (-5.0 to 0.0 to +5.0 (mm))

Special Processing

- Special Paper Processing
 - Manual Back Side Print (2-Sided Only)
 - Multi-Purpose Tray
 - Off, On
 - Drawer 1
 - Off, On
 - Drawer 2
 - Off, On
 - Rough Surface Paper Mode
 - Multi-Purpose Tray
 - Off, On
 - Drawer 1
 - Off, On
 - Drawer 2
 - Off, On
 - Env. Flap Closing Prevention
 - Off, On
 - Paper Wrinkle Correction
 - Off, Mode 1, Mode 2
 - Paper Curl Correction
 - Off, Mode 1, Mode 2
- Reduce Ppr. Sticking at Output
 - Off, On
- High Humidity Mode
 - Off, On
- Low Humidity Mode
 - Off, On
- Reduce Ghosting 1
 - Off, On
- Reduce Ghosting 2
 - Off, On
- Regularly Clean Fix. Assembly
 - Auto, Level 1, Level 2, Level 3
- Rdc. Condens. (1-Sd->2-Sd Prt)
 - Off, On
- Rdc Condens. (Consec 2-Sd Prt)
 - Off, Mode 1, Mode 2
- Correct Uneven Gloss
 - Off, On
- Corr. Void on Paper Back Side
 - Off, On
- Drop Pattern Reduction Mode
 - Off, On
- Corr. Img. Corrup. by Ppr Dust
 - Off, On
- Prevent Fogging
 - Off, On
- Reduce Drum Streak
 - Off, On
- Reduce Toner Flaking
 - Off, Mode 1, Mode 2
- Fix. Roller Contam. Reduction
 - Off, On
- Reduce Toner Fixing Stain 2
 - Auto, Mode 1, Mode 2
- Auto Detect B&W/Color Orig.
 - Mode 1, Mode 2
- Rdc. Faint Print After Rplc. Cart.
 - Off, On

Maintenance

- Clean Fixing Assembly
- Clean ITB
- Control Condensation
 - Off
 - On
- Allow Job Printing During Process, Do Not Allow Job Printing During Process

Function Settings

Common

Paper Feed Settings



- Paper Source Auto Selection
 - Printer
 - Multi-Purpose Tray
 - Off, On
 - Drawer 1
 - Off, On
 - Drawer 2
 - Off, On
 - Receive
 - Multi-Purpose Tray
 - Off, On
 - Drawer 1
 - Off, On
 - Drawer 2
 - Off, On
 - Other
 - Multi-Purpose Tray
 - Off, On
 - Drawer 1
 - Off, On
 - Drawer 2
 - Off, On
- Switch Paper Feed Method
 - Multi-Purpose Tray
 - Speed Priority, Print Side Priority
 - Drawer 1
 - Speed Priority, Print Side Priority
 - Drawer 2
 - Speed Priority, Print Side Priority

Printer




Printer Settings

- Action When Free Paper Size Mismatch
 - Multi-Purpose Tray
 - Force Output, Display Error
 - Drawer 1
 - Force Output, Display Error
 - Drawer 2
 - Force Output, Display Error
- Copies
 - 1 to 999
- 2-Sided Printing
 - Off, On
- Default Paper
- Paper Size Override
 - Off, On
- Print Quality
 - Density
 - Yellow/Magenta/Cyan/Black
 - 17 Levels
 - Fine Adjust
 - Yellow/Magenta/Cyan/Black
 - High/Medium/Low
 - 17 Levels
 - Toner Save
 - Off, On
 - Gradation
 - High 1, High 2
 - Density Fine Adjustment
 - Five Levels
 - Resolution
 - 1200 dpi, 600 dpi
 - Special Smoothing Mode
 - Mode 1, Mode 2, Mode 3, Mode 4, Mode 5, Mode 6
 - Toner Volume Correction
 - Standard, Gradation Priority, Text Priority
 - Line Control
 - Resolution Priority, Gradation Priority
 - Width Adjustment
 - Off
 - On
 - Text, Line, Text and Line
 - Advanced Smoothing
 - Advanced Smoothing
 - Off, Level 1, Level 2
 - Apply to Graphics
 - Off, On
 - Apply to Text
 - Off, On
 - Gradation Smoothing
 - Gradation Smoothing
 - Off, Level 1, Level 2
 - Apply to Graphics
 - Off, On
 - Apply to Images
 - Off, On
- Layout
 - Binding Location
 - Long Edge, Short Edge
 - Gutter
 - 1.90 to 0.00 to +1.90 (inches) or -50.0 to 0.0 to +50.0 (mm)
 - Offset Short Edge (Front)
 - 2.00 to 0.00 to +2.00 (inches) or -50.0 to 0.0 to +50.0 (mm)
 - Offset Long Edge (Front)
 - 2.00 to 0.00 to +2.00 (inches) or -50.0 to 0.0 to +50.0 (mm)
 - Offset Short Edge (Back)
 - 2.00 to 0.00 to +2.00 (inches) or -50.0 to 0.0 to +50.0 (mm)
 - Offset Long Edge (Back)
 - 2.00 to 0.00 to +2.00 (inches) or -50.0 to 0.0 to +50.0 (mm)
- Auto Error Skip
 - Off, On
- Timeout
 - 5 to 15 to 300 (sec.)
- Personality
 - Auto, PS, PCL, PDF, XPS, Imaging
- Color Mode
 - Auto (Color/B&W), Black & White
- Compressed Image Output
 - Output, Display Error
- Escape Tray Mode
 - Off, On
- Speed/Prt. Side Priority for 2-Sd
 - Speed Priority, Print Side Priority
- Prioritize MP Tray
 - Off, On
- Check Paper Size in Tray
 - Off, On
- Recovery Printing
 - Off, On
- UFR II
 - Halftones
 - Error Diffusion
 - Off, On


Menu Route Map

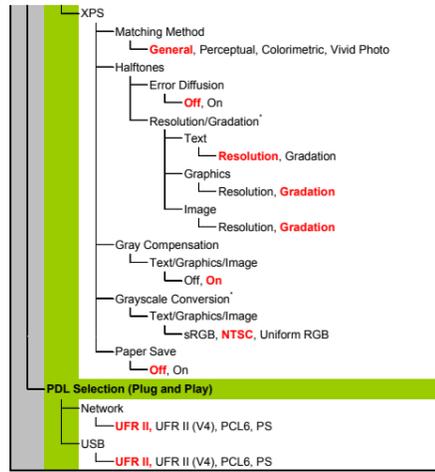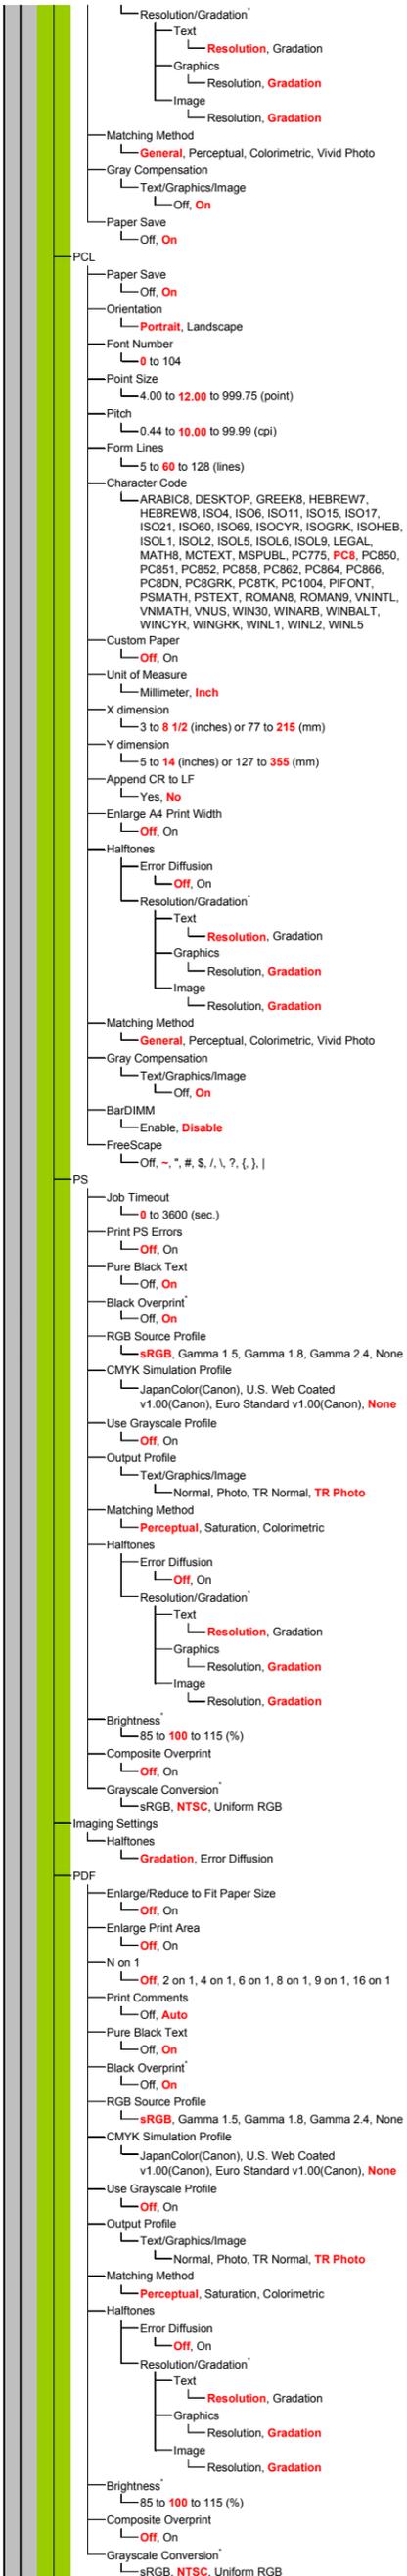






Settings marked with "*" may not be displayed depending on the options, or other setting items.

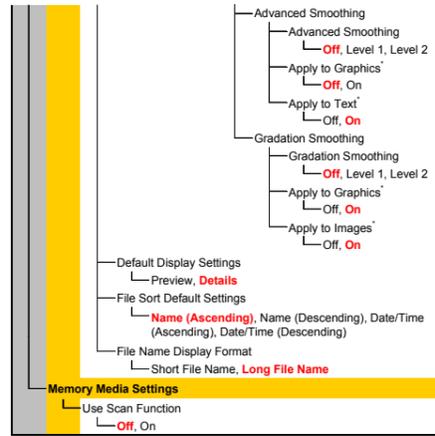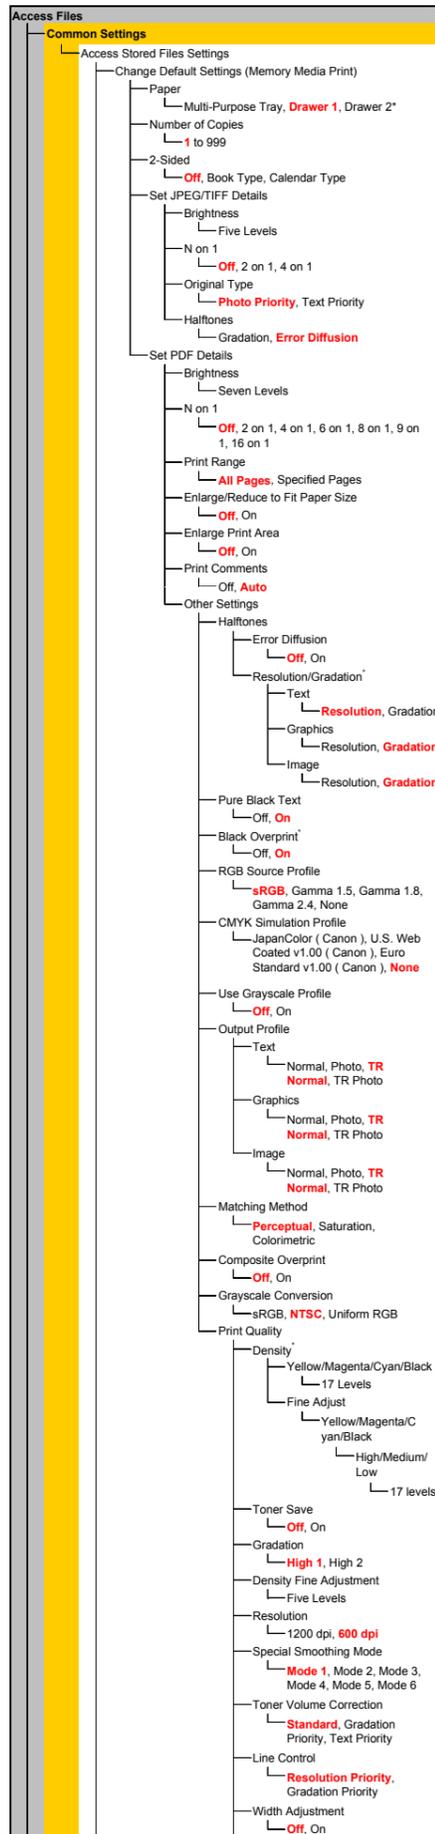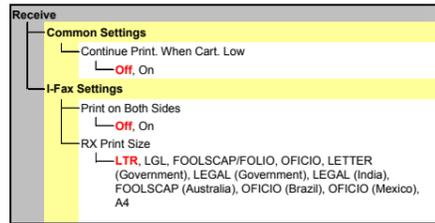

Settings marked with "*" may not be displayed depending on the options, or other setting items.

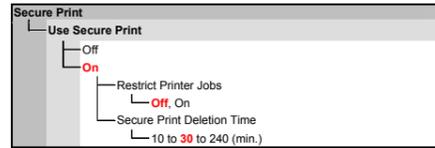

Management Settings

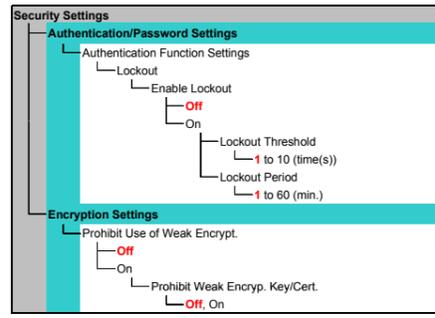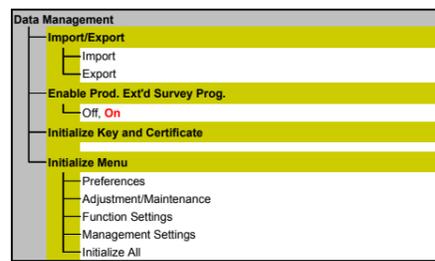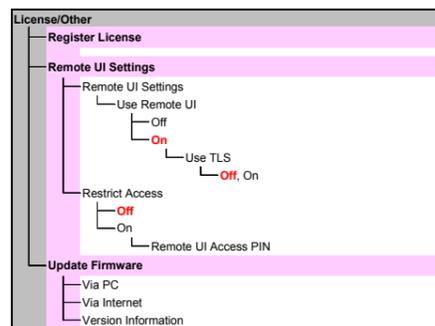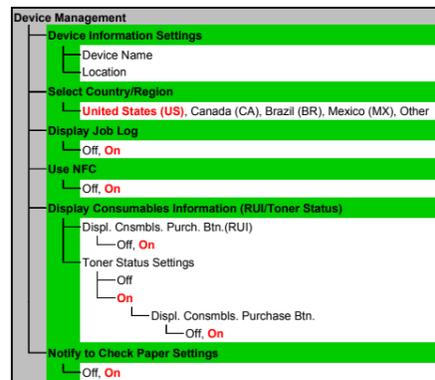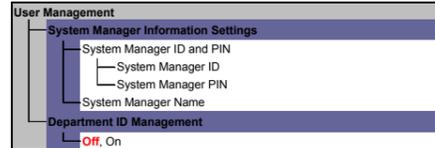

Initialize All Data/Settings